

INDEX

A

Accessories	12-1
Antenna - Manual	12-13
Back-Up Lamps	12-15
Clock - Electric	12-15
Radio	12-11
Antenna Trimmer - Adjust	12-12
Description	12-11
Remove and Install	12-11
Speaker - Rear Seat	12-14
Trouble Diagnosis	12-14
Windshield Wiper and Washer	
One-Speed	11-62
Two-Speed	11-68
Washer	11-73
Air Cleaner and Silencer	6B-1
Air Conditioning - See Air Conditioning Manual	
Anti-Freeze	6A-8
Axle - Rear	4-1

B

Back-Up Lamps	12-16
Ball Joints	3-11
Battery	11-2
Belt Tension Chart	6A-16
Brakes	5-1
Lubrication - See Lubrication - General	2-2
Power - Delco - Moraine	5A-1
Adjustments	5A-5
Assembly	5A-9
Cleaning and Inspection	5A-8
Description	5A-1
Diagnosis and Testing	5A-12
Installation	5A-12
Minor Repairs	5A-5
Overhaul	5A-6
Principles of Operation	5A-2
Special Tools and Specifications	5A-14
Standard	5-1
Adjustments	5-5
Cautions	5-18
Description	5-1
Operation	5-1
Overhaul	5-7
Periodic Service	5-3
Special Tools	5-20
Specifications	5-19
Trouble Diagnosis and Testing	5-14

C

Camber and Caster Adjustment	3-7
Camshaft	6-6 and 6-43
Carburetor	6B-1
Carter - AFB 4-Barrel	6B-32
Adjustment on Car	6B-37
Description	6B-32
Overhaul and Adjustment	6B-37
Rochester BU One-Barrel	6B-5
Adjustments on Car	6B-10
Description	6B-5

Carburetor (Continued)	
Rochester BU One-Barrel (Continued)	
Overhaul	6B-11
Rochester 2GC	6B-19
Adjustment on Car	6B-24
Description	6B-19
Overhaul and Adjustments	6B-24
Periodic Service	6B-24
Rochester 2GC Triple 2-Barrel	6B-47
Adjustments	6B-48
Description	6B-47
Overhaul	6B-48
Trouble Diagnosis and Testing	6B-51
Chassis Sheet Metal	10-1
Alignment	10-1
Bumpers	10-3
Hood	10-4
Radiator	10-5
Cigar Lighter	11-53
Clock - Electric	12-15
Clutch - Engine (See Engine Clutch)	6D-1
Coil Spring Suspension	3-1
Adjustment on Car	3-3
Ball Joints	3-4
Caster and Camber	3-5
Front Wheel Bearing	3-3
Toe-In	3-5
Toe-Out	3-5
Control Arm Bushings	
Front	3-8
Rear	3-14
Control Arms	
Front	
Lower	3-10
Upper	3-8
Rear	
Lower	3-13
Upper	3-13
Description	3-1
Periodic Service	3-3
Shock Absorbers	
Front	3-7
Rear	3-12
Special Tools	3-21
Specifications	3-19
Springs	
Front	3-8
Rear	3-12
Stabilizer Shaft	3-12
Trouble Diagnosis and Testing	3-15
Compression Ratio	6-1
Compression Test	6C-3
Control Arms - See Coil Spring Suspension	
Crankcase Ventilation	6A-8
Crankshaft	6-37

D

Decimal Equivalents	1-6
Differential	
Lubricants	2-2
Saf-T-Track	4-24
Description	4-24

Differential (Continued)	
Saf-T-Track (Continued)	
Service Procedures	4-24
Trouble Diagnosis	4-27
Standard	4-1
Description	4-1
Major Repairs	4-10
Minor Repairs	4-6
Periodic Services	4-6
Trouble Diagnosis	4-27
Directional Signal	11-53
Distributor	
6-Cylinder	11-30
8-Cylinder	11-32
Drill Sizes	1-7
Drive Belt Tension	6A-16

E

Electrical and Instruments	11-1	Electrical and Instruments (Continued)	
Charging Circuit	11-2	Starting Circuit (Continued)	
Battery	11-2	Disassemble Starting Motor	11-9
Description	11-2	Install Starting Motor	11-13
Periodic Service	11-2	Periodic Service	11-8
Repairs	11-2	Remove Starting Motor	11-9
Testing, Boosting and Charging	11-2	Trouble Diagnosis	11-13
Trouble Diagnosis	11-7	Windshield Wiper	11-62
Generator	11-13	One-Speed	11-62
Assemble	11-19	Two-Speed	11-68
Disassemble	11-15	Windshield Washer	11-73
Installation	11-19	Wiring Diagrams	11-3
Removal	11-15	Engine Clutch	
Service	11-15	Adjustments	6D-1
Regulator, Standard Generator	11-20	Description	6D-1
Adjustments	11-21	Periodic Service	6D-1
Regulator, Transistor Generator	11-26	Remove and Replace	6D-3
Description	11-26	Specifications	6D-6
Operating Principles	11-26	Engine Cooling and Lubrication	
Trouble Diagnosis	11-27	Crankcase Ventilation	6A-8
Ignition Circuit - Standard	11-29	Description - Cooling	6A-1
Periodic Service	11-29	Description - Lubrication	6A-4
Distributor - 6-Cylinder Engine	11-30	Drive Belts	6A-16
Distributor - 8-Cylinder Engine	11-32	Oil Filter	6A-4 and 6A-13
Spark Plugs	11-37	Radiator	6A-1
Ignition Circuit - Transistor	11-44	Service Operations	6A-8
Description	11-44	Specifications	6A-17
Periodic Service	11-48	Trouble Diagnosis	6A-15
Regulator and Control Units	11-51	Water Pumps	6A-2
Trouble Diagnosis	11-49	Engine Fuel	6B-1
Ignition Coil	11-40	Accelerator Linkage Adjustment	6B-4
Instruments	11-56	Air Cleaner and Silencer - Description	6B-1
Description	11-56	Air Cleaner and Silencer - Service	6B-2
Minor Repairs	11-57	Carburetor	
Periodic Service	11-57	Carter AFB 4-Barrel	6B-32
Testing	11-58	Rochester 2GC	6B-19
Trouble Diagnosis	11-59	Rochester BV One-Barrel	6B-5
Lighting and Horn Power Circuits	11-51	Rochester 2GC Triple Two-Barrel	6B-47
Adjustments - Headlights	11-52	Trouble Diagnosis and Testing	6B-51
Description	11-51	Fuel Filter	2-3
Trouble Diagnosis	11-52	Fuel Pump	6B-54
Special Tools	11-80	Heat Control	6B-1
Specifications	11-77	Idle Speed-Up Device	6B-2
Starting Circuit	11-2	Throttle Return Check	6B-2
Assemble Starting Motor	11-11	Engine Lubrication (See Lubrication-General)	6A-1
Battery	11-2	Engine - Mechanical	6-1
Description	11-2	Camshaft	6-24 and 6-62
		Camshaft Bearings	6-30 and 6-62
		Connecting Rod and Piston	
		Assembly	6-31 and 6-71
		Connecting Rod Bearing	6-30 and 6-70
		Crankshaft	6-37 and 6-76
		Distributor Lower Bearing (6-Cyl.)	6-38
		Fitted Block Assembly	6-38 and 6-78
		General Description	6-1 and 6-41
		Harmonic Balancer	6-22 and 6-61
		Information on Engine Service	6-8 and 6-46
		Install (V-8)	6-49
		Insulators (V-8)	6-48
		Main Bearings	6-29 and 6-68
		Manifolds - Valve Trains -	
		Cylinder Heads (V-8)	6-50
		Oil Pan	6-27 and 6-65
		Oil Pump	6-27 and 6-66
		Periodic Service	6-28 and 6-67
		Rear Main Bearing Oil Seal	6-28 and 6-67

Engine - Mechanical (Continued)

Remove	6-48
Service Operations on Car	6-10 and 6-48
Specifications	6-86 and 6-89
Timing Gear Cover	6-23 and 6-61
Trouble Diagnosis	6-95
Valves and Seats - Recondition (6 Cyl.)	6-21
Engine Tune-Up	6C-1
Exhaust System	8-3
Description	8-3
Dual Exhaust	8-4
Exhaust Pipe - Remove and Replace	8-3
Muffler - Remove and Replace	8-3
Specifications	8-5
Tail Pipe - Remove and Replace	8-3

F

Fan	6A-2
Frame	1A-1
Body to Frame Mountings	1A-2
Description	1A-1
Location for Raising	1A-1
Fuel Filter	2-3
Fuel Gauge	11-56
Fuel Pump	6B-54
Description	6B-54
Overhaul	6B-54
Trouble Diagnosis and Testing	6B-56
Fuel Tank	8-1
Description	8-1
Draining Fuel Tank	8-1
Tank - Remove and Replace	8-2
Trouble Diagnosis	8-3
Fuse Block	11-51

G

Generator	11-13
-----------	-------

H

Harmonic Balancer	6-22 and 6-61
Headlights - Adjust	11-52
Heat Riser - See Manifold Heat Control	
Heater	12-1
Horns	11-53
Hydraulic Valve Lifters	6-13 and 6-54

I

Information - General	1-1
Instruments	11-56

L

Lighting	11-51
Lock Coding	1-2
Lubrication - General	2-1

M

Manifold Heat Control	6B-1
Lubrication	2-2
Miscellaneous Data	1-6
Model Identification	1-2

O

Oil Filter	6A-4
Oil Pump - Engine	6A-4

P

Pistons and Rods - See Engine Mechanical	
Positive Crankcase Ventilation System	6A-8
Propeller Shaft	4A-1
Power Brakes - See Brakes, Power	
Power Steering - See Steering	

R

Radio	12-11
Radiator - See Engine Cooling and Lubrication	
Rear Axle	4-1
General Description	4-1
Major Repairs	4-10
Axle Assembly - Remove and Replace	4-10
Minor Service and Repairs	4-6
Axle Shaft Bearing	4-8
Axle Shaft Seal	4-8
Pinion Bearing Oil Seal	4-6
New Car Pre-Delivery Inspection	4-3
Periodic Service	4-6
Red Lead Test	4-11
Saf-T-Track Differential	4-24
Specification	4-29
Tooth Contact Patterns	4-12
Torque Specifications	4-30
Trouble Diagnosis and Testing	4-27
Regulator, Standard	11-20
Regulator, Transistor Generator	11-26
Road Test Car	6C-5

S

Serial Numbers -	
Engine	6-46
Vehicle	1-1
Service Intervals and Items	2-2
Speaker - Rear Seat	12-14
Specifications - General	1-5
Speedometer	11-57
Speedometer Gear Usage	1-3
Shock Absorbers	
Front	3-7
Rear	3-12
Springs	
Front	3-8
Rear	3-12
Stabilizer Shaft	3-12
Starting Circuit	11-2
Steering	
Power Steering Gear	9A-1
Adjustments	9A-6
Assemble	9A-17
Assembly of Sub-Assemblies	9A-14
Cleaning and Inspection	9A-12
Description	9A-1
Design	9A-1
Disassemble	9A-7

Power Steering Gear (Continued)

Installation	9A-20
Minor Repairs	9A-7
Operation	9A-2
Periodic Service	9A-6
Removal	9A-7
Special Tools	9A-42
Specifications	9A-25
Trouble Diagnosis and Testing	9A-20
Power Steering Pump - Vane Type	9A-26
Adjustments	9A-33
Assemble	9A-34
Cleaning and Inspection	9A-34
Description	9A-26
Disassemble	9A-33
Installation	9A-37
Operation	9A-28
Periodic Service	9A-31
Removal	9A-33
Special Tools	9A-42
Specifications	9A-41
Trouble Diagnosis and Testing	9A-37
Standard Steering Gear	9-1
Adjustments	9-2
Assemble	9-18
Cleaning and Inspection	9-17
Description	9-1
Disassemble	9-16
Installation	9-20
Minor Repairs	9-4
Periodic Service	9-2
Removal	9-16
Specifications	9-23
Trouble Diagnosis and Testing	9-21
Suspension	3-1
Adjustments	3-3
Ball Joints	3-4
Bearings, Front Wheel	3-3
Description	3-1
Front Suspension	3-1
Rear Suspension	3-2
Inspection	3-5
Minor Repairs	3-7
Periodic Service	3-3
Special Tools	3-21
Specifications	3-19
Torque Specifications	3-19
Trouble Diagnosis	3-15
Wheel Alignment	3-5

T

Tachometer	12-16
Temperature Indicator	11-57
Thermostat	6A-9
Throttle Return Check	6B-2
Tilt Steering Wheel	9-8
Timing Chain and Gears	6-6 and 6-43
Tires	3A-1
Transmission and Gearshift Control	
Four-Speed	
Assemble	7A-15
Cleaning and Inspection	7A-14

Transmission and Gearshift Control (Continued)

Description	7A-1
Design	7A-1
Disassemble	7A-11
Installation	7A-19
Major Repairs	7A-9
Minor Repairs	7A-6
Operation	7A-3
Periodic Service	7A-5
Removal	7A-9
Shift Linkage Adjustment	7A-6
Special Tools	7A-22
Specifications	7A-22
Trouble Diagnosis and Testing	7A-19
Automatic Transmissions	7B-1
Adjustments and Maintenance	7B-15
Disassembly	7B-28
General Description	7B-1
Hydraulic Operation	7B-6
Identification	7B-1
Inspection	7B-31
Installation and Removal	7B-27
Power Flow	7B-3
Pressure Checks	7B-52
Reassembly	7B-44
Service Operations	7B-20
Special Tools	7B-54
Specifications	7B-53
Trouble Diagnosis	7B-49
Standard	7-1
Adjustments on Car	7-6
Assemble	7-19
Cleaning and Inspection	7-17
Description	7-1
Design	7-1
Disassemble	7-14
Gearshift Rod Adjustment	7-6
Installation	7-22
Major Repairs	7-12
Minor Repairs	7-9
Operation	7-3
Periodic Service	7-5
Removal	7-12
Trouble Diagnosis and Testing	7-23
Tune - Up	6C-1

W

Water Pump	6A-10 and 6A-13
Weights and Measures	1-6
Wheels and Tires	3A-1
Alignment, Front End	3-5
Description	3A-1
Minor Repairs	3A-3
Periodic Service	3A-2
Specifications	3A-8
Tire Application and Pressure Chart	3A-1
Trouble Diagnosis and Testing	3A-6
Windshield Wiper	
One-Speed	11-62
Two-Speed	11-68
Wiring Diagrams	11-3