

# INDEX

## A

Accessories.....	(Section 15)
Antenna.....	15-7
Automatic Level Control.....	4-10
Auxiliary Gauges.....	15-5,22
Clocks.....	15-4,16
Console.....	15-6,52
Cornering Lamps.....	15-25
Cruise Control.....	15-1
Deck Lid Release.....	15-5,18
Defogger - Rear Window	
Blower.....	15-5,29
Electric.....	15-5,26
Headlamp Delay.....	15-35
Luggage Carrier.....	15-56
Radios.....	15-6,7,21
Speaker - Rear Seat.....	15-8,43,51
Stereo - Tape Player.....	15-7,45
Tachometer.....	15-5,19
Vacuum Tire Pump.....	15-25
Warning Lamps.....	15-6,30
Wind Deflector.....	15-57
Air Cleaner and Silencer.....	6B-1
Air Conditioning	
Automatic Temperature Control	
.....	(Section 1B)
Ambient Sensor and Switch.....	1B-1,5
Bi-Level Boost Switch.....	1B-18
Control Panel.....	1B-2,11
Functional Test.....	1B-4
General Description.....	1B-1
In-Car Sensor.....	1B-1,5
Programmer.....	1B-2,13
Temperature Door Link.....	1B-11
Trouble Diagnosis.....	1B-18
Custom Air Conditioner.....	(Section 1A)
General Description.....	1A-5
Air Distribution.....	1A-22
Blower Motor.....	1A-5
Compressor.....	1A-12
Condenser.....	1A-18
Control Panel.....	1A-21
Evaporator.....	1A-8
Expansion Valve.....	1A-5
Heater Components.....	1A-19
P.O.A. Valve.....	1A-8
Receiver Dehydrator.....	1A-19
Refrigeration Components.....	1A-5
Principles of Refrigeration.....	1A-1
Operation.....	1A-2
Refrigerant.....	1A-3
Precautions.....	1A-4
Service Procedures.....	1A-26
Adding Refrigerant.....	1A-32
Air Inlet.....	1A-59
Charging the System.....	1A-29

## Air Conditioning (Continued)

Custom Air Conditioning (Continued)	
Compressor Assembly.....	1A-33
Condenser.....	1A-53
Depressurizing the System.....	1A-27
Evacuating the System.....	1A-27
Evaporator Core and Case.....	1A-58
Expansion Valve.....	1A-53
Oil Level.....	1A-33
P.O.A. Valve.....	1A-53
Receiver Dehydrator.....	1A-58
Diagnosis.....	1A-79
Trouble Diagnosis.....	1A-82
Alignment - Front Suspension.....	3-3
Antenna.....	15-7,65
Assembly Plant Codes.....	0-1
Automatic Level Control.....	4-10
Auto - Therm Air Cleaner.....	6D-3
Auxiliary Gages.....	15-5,22
Axle - Rear.....	(See Differential)

## B

Back-Up Lamps.....	12-7,49
Ball Joints.....	(Section 3)
Inspection	
Lower Pontiac.....	3-6
Lower Tempest and Grand Prix.....	3-7
Upper.....	3-6
Remove and Replace	
Lower-Pontiac.....	3-21
Lower-Tempest and Grand Prix.....	3-22
Upper.....	3-20
Battery.....	6C-3, 12-1,20
Bearings.....	(See Unit Concerned)
Belt Tension Chart.....	6A-14
Body Mountings.....	2-2
Brakes	
Disc.....	(Section 5E)
General Description.....	5E-1
Metering Valve.....	5E-2
Operation.....	5E-2
Proportioning Valve.....	5E-2
Service.....	5E-3
Bleeding Disc Brakes.....	5E-8
Caliper.....	5E-3
Lining.....	5E-3
Proportioning Valve.....	5E-11
Rotor.....	5E-8
Specifications.....	5E-14
Trouble Diagnosis and Testing.....	5E-12
Power-Bendix.....	(Section 5B)
Bleeding Bendix Power Brakes.....	5B-5
Checks and Adjustments on Car.....	5B-5
General Description.....	5B-1
Inspection.....	5B-9
Major Repairs.....	5B-7

Brakes (Continued)

Power Bendix (Continued)	
Major Repairs (Continued)	
Master Cylinder.....	5B-8
Power Piston.....	5B-7
Power Unit.....	5B-7
Principles of Operation.....	5B-2
Trouble Diagnosis and Testing.....	5B-12
Power-Bendix Heavy Duty.....	(Section 5C)
Bleeding Brakes.....	5C-3
Checks and Adjustments.....	5C-3
General Description.....	5C-3
Major Repairs.....	5C-4
Diaphragms.....	5C-7
Master Cylinder.....	5C-4
Power Section.....	5C-6
Principles of Operation.....	5C-3
System Tests.....	5C-11
Trouble Diagnosis.....	5C-10
Power - Delco-Moraine.....	(Section 5A)
Bleeding Brakes.....	5A-4
Checks and Adjustments.....	5A-3
Gaging Procedure.....	5A-9
General Description.....	5A-1
Major Repair.....	5A-4
Front Housing.....	5A-4
Master Cylinder.....	5A-6
Power Piston.....	5A-5
Principles of Operation.....	5A-3
System Test.....	5A-10
Trouble Diagnosis.....	5A-10
Power - Delco-Moraine Heavy Duty	
.....	(Section 5D)
Bleeding Brakes.....	5D-6
Checks and Adjustments.....	5D-5
Gaging Procedure.....	5D-14
General Description.....	5D-1
Major Repairs.....	5D-6
Master Cylinder.....	5D-10
Power Cylinder.....	5D-14
Power Piston.....	5D-11
Principles of Operation.....	5D-2
Trouble Diagnosis and Testing.....	5D-15
Standard.....	(Section 5)
Adjustments.....	5-6
Bleeding Brakes.....	5-16
General Description.....	5-1
Hoses and Pipes.....	5-15
Hydraulic System.....	5-12
Inspection and Cleaning.....	5-3,8
Master Cylinder.....	5-12
Parking Brake.....	5-19
Principles of Operation.....	5-2
Specifications.....	5-28
Trouble Diagnosis and Testing.....	5-20
Wheel Cylinder.....	5-14
Bumpers - Front and Rear.....	(Section 14)
Description and Adjustment.....	14-1
Front Bumpers.....	14-1
Rear Bumpers.....	14-7
Repair - Endura and Lexan.....	14-19

C

Caster and Camber Adjustments.....	3-10
Camshaft	
6 Cylinder Engine.....	6-4
V-8 Engine.....	6-44
Canister.....	8-25
Carburetor.....	(See Engine - Fuel)
Chassis Electrical and Instruments	
.....	(Section 12)
Battery.....	12-1,20
Cigar Lighter.....	12-8,46
Fuel Gage.....	12-8,43
Fuse Block.....	12-4,20
General Description.....	12-1
Horns.....	12-6,29
Ignition Switch.....	12-49
Instrument Panel Pad.....	12-36
Park and Signal Lamps.....	12-27
Service Procedures.....	12-20
Tail Lamp.....	12-59
Trouble Diagnosis.....	12-60
Windshield Wiper Switch.....	12-45
Wire Harness - Instrument Panel.....	12-50
Wiring Diagrams	
Grand Prix.....	12-67
Pontiac.....	12-65
Tempest.....	12-66
Chassis Sheet Metal.....	(Section 11)
Adjustments.....	11-1
Fenders.....	11-4
General Description.....	11-1
Headlamp Filler Panel.....	11-9
Hood.....	11-1
Hood Latch.....	11-2
Hood Hinge.....	11-2
Inner Fender Skirt.....	11-4
Cigar Lighter.....	12-8,46
Clocks.....	15-4,16
Clutch - Manual Transmission.....	(Section 7)
General Description.....	7-1
Periodic Service	
Clutch Pedal Adjustment.....	7-3
Lubrication.....	7-3
Service and Repairs	
Clutch.....	7-6
Control Linkage.....	7-6
Flywheel.....	7-7
Pilot Bearing.....	7-7
Starter Ring Gear.....	7-7
Specifications.....	7-10
Trouble Diagnosis.....	7-8
Coil - Ignition.....	6E-27
Column-Steering	
Standard Column.....	9-23
Tilt Wheel Column.....	9-30
Companion Flange.....	4A-3
Compression Ratio	
6 Cylinder Engine.....	6-91
V-8 Engine.....	6-94
Compression Test.....	6C-1
Compressor - Air Conditioner.....	1A-12,33
Condenser - Air Conditioner.....	1A-18,53

## INDEX

- Connecting Rods  
   6 Cylinder Engine .....6-7  
   V-8 Engine.....6-44  
 Console .....15-6,52  
 Control Arms and Bushings  
   Front  
     Lower .....3-19  
     Upper.....3-17  
   Rear  
     Lower .....4-10  
     Upper.....4-8  
 Cooling System.....(See Engine Cooling)  
 Cornering Lamps .....15-25  
 Crankcase Ventilation System .....6D-1  
 Crankshaft  
   6 Cylinder Engine .....6-4  
   V-8 Engine.....6-41  
 Crossover Pipe.....(See Exhaust System)  
 Cruise Control .....15-1,13,56  
 Curb Height .....3-5  
 Cylinder Head  
   6 Cylinder Engine .....6-4  
   V-8 Engine.....6-41
- D**
- Decimal Equivalents .....0-13  
 Deck Lid Release .....15-5,18  
 Defogger - Rear Window.....(See Accessories)  
 Differential  
   Safe-T-Track Differential.....(Section 4B)  
     General Description .....4B-1  
     Major Repairs .....4B-4  
     Specifications .....4B-10  
     Trouble Diagnosis and Testing .....4B-10  
   Safe-T-Track Differential Type C  
     .....(Section 4D)  
     Flushing Procedure .....4D-5  
     General Description.....4D-1  
     Lubrication .....4D-1  
     Operation .....4D-1  
     Overhaul.....4D-1  
     Trouble Diagnosis and Testing .....4D-5  
   Standard Differential.....(Section 4A)  
     General Description .....4A-1  
     Lubrication .....4A-3  
     Major Repairs .....4A-10  
       Rear Axle Assembly .....4A-10  
       Differential Case .....4A-14  
       Pinion Assembly .....4A-18  
     Minor Service and Repairs.....4A-3  
     Operation .....4A-2  
     Specifications .....4A-29  
     Trouble Diagnosis and Testing .....4A-24  
   Standard Differential Type C  
     .....(Section 4C)  
     General Description .....4C-1  
     Operation .....4C-2  
     Service Procedures .....4C-3  
     Specifications .....4C-11  
     Trouble Diagnosis and Testing .....4C-10  
 Dimensions - Basic .....0-8  
 Directional Signal .....9-16
- Distributor  
   6 Cylinder Engine .....6E-25,33  
   V-8 Engine .....6E-26,34  
 Distributor Points .....6C-2, 6E-24  
 Drill Sizes .....0-13  
 Drive Belt Tension .....6A-14  
 Drive Shaft.....(Section 4E)  
   Alignment .....4E-2  
   General Description.....4E-1  
   Trouble Diagnosis and Testing .....4E-5  
   Universal Joints .....4E-2  
 Dwell .....6C-5, 6D-8, 6E-24
- E**
- Emission Control System .....(Section 6D)  
 Controlled Combustion System .....6D-5  
 Evaporation Control System .....6D-7  
 Ignition Timing .....6D-8  
 T.C.S. System .....6D-5  
 Engine - Cooling.....(Section 6A)  
   General Description .....6A-1  
   Cooling System and Coolant.....6A-5  
   Radiator .....6A-1  
   Thermostat .....6A-5  
   Water Pump.....6A-3  
   Service Operations .....6A-6  
   Specifications .....6A-15  
   Trouble Diagnosis.....6A-10  
 Engine - Electrical.....(Section 6E)  
   Battery .....6C-3, 6E-1, 12-1  
   Charging Circuit.....6E-10  
   Generator .....6E-10  
     Checks in Car .....6E-18  
     Operating Principles.....6E-11  
   Standard Generator Regulator .....6E-17  
     Checks and Adjustments.....6E-18  
     Operating Principles.....6E-17  
   Transistor Generator Regulator .....6E-18  
   Cranking Circuit.....6E-1  
     Checks and Adjustments .....6E-4  
     General Description .....6E-1  
     Starter .....6E-1  
     Trouble Diagnosis .....6E-3  
   Ignition Circuit .....6E-24  
     Coil and Resistor .....6E-27  
     Contact Set .....6E-24  
     Distributor .....6E-24  
     General Description .....6E-24  
     Periodic Service .....6E-24  
     Spark Plugs.....6E-28  
     Timing .....6C-5,6E-24  
     Trouble Diagnosis .....6E-32  
   Engine - Fuel.....(Section 6B)  
     Acceleration Linkage and  
       Adjustments.....6B-4  
     Air Cleaner and Silencer .....6B-1  
     Carburetor  
       MV "Monojet" .....6B-7  
       2GV .....6B-22  
       4MV Quadrajel.....6B-37  
     Fuel Pump.....6B-2  
     Heat Control Valve.....6B-1

Engine (Continued)	
Hot Idle Compensator.....	6B-4
Idle Stop Solenoid.....	6B-2
Ram Air.....	6B-2
Trouble Diagnosis and Testing.....	6B-65
Engine Lubrication.....(Section 6A)	
Circulation.....	6A-10
Oil Filter.....	6A-14
Oil Pump.....	6A-10
Specifications.....	6A-15
Engine - Mechanical.....(Section 6)	
6-Cylinder Engine.....6-4	
Bearings	
Camshaft.....	6-4,26
Connecting Rod.....	6-7,29
Crankshaft.....	6-4,28
Camshaft.....	6-4,24
Connecting Rod.....	6-7,29
Crankshaft.....	6-4,36
Cylinder Bores.....	6-31
Cylinder Heads.....	6-4,17
Cylinder Heads and Valves	
Recondition.....	6-19
Engine - Remove and Install.....	6-11
Fitted Block Assembly.....	6-37
General Description.....	6-4
Harmonic Balancer.....	6-22
Insulators.....	6-11
Manifolds.....	6-9,12
Oil Pan.....	6-26
Oil Pump.....	6-27
Oil Seal - Main Bearing.....	6-28
Periodic Service.....	6-11
Piston Assembly.....	6-30
Piston Rings.....	6-34
Push Rod.....	6-13
Rocker Arm Studs.....	6-18
Specifications.....	6-91
Trouble Diagnosis.....	6-84
Valve Lifters.....	6-13
V-8 Engine.....6-41	
Bearings	
Camshaft.....	6-44,64
Connecting Rod.....	6-44,71
Crankshaft.....	6-41,70
Camshaft.....	6-44,64
Crankshaft.....	6-41,78
Cylinder Bores.....	6-74
Cylinder Head.....	6-41,58
Cylinder Head and Valve	
Recondition.....	6-59
Engine - Remove and Replace.....	6-49
Fitted Block Assembly.....	6-81
General Description.....	6-41
Harmonic Balancer.....	6-62
Insulators.....	6-47
Manifolds.....	6-51,52
Oil Pan.....	6-66
Oil Pump.....	6-68
Oil Seal - Main Bearing.....	6-69
Periodic Service.....	6-47
Piston Assembly.....	6-44,72

Engine Mechanical (Continued)	
V-8 Engine (Continued)	
Piston Rings.....	6-77
Push Rod.....	6-54
Push Rod Cover.....	6-52
Rocker Arm Studs.....	6-58
Specifications.....	6-94
Timing Chain Cover.....	6-62
Trouble Diagnosis.....	6-84
Valve Lifter.....	6-54
Valve Train Adjustments.....	6-57
Engine - Tune-Up.....(Section 6C)	
Air Cleaner Service.....	6C-4
Battery.....	6C-3
Choke.....	6C-4
Compression.....	6C-1
Connection - Tune-Up.....	6C-4
Coolant Level and Hoses.....	6C-4
Crankcase	
Oil Level.....	6C-4
Ventilation.....	6C-5
Dwell.....	6C-5
Fan Belt.....	6C-4
Fuel Lines and Filter.....	6C-4
Generator and Regulator.....	6C-4
Idle Speed and Mixture.....	6C-5
Idle Stop Solenoid.....	6C-4
Ignition System.....	6C-2
Intake Manifold Bolts.....	6C-4
Manifold Heat Valve.....	6C-4
Points.....	6C-2
Road Test.....	6C-6
Spark Plugs.....	6C-2
Timing and Advance.....	6C-5
Evaporative Control System Canister.....	8-25
Evaporator.....	1A-8,58
Exhaust System.....(Section 8)	
Grand Prix.....	8-9
Mustang.....	8-9
Pontiac.....	8-17
Expansion Valve.....	1A-5,53

**F**

Fan.....	6A-4
Fan Belt.....	6C-4
Fender - Front.....	11-4
Flywheel.....	7-7
Frame.....(Section 2)	
Alignment.....	2-1
Body to Frame Mountings.....	2-2
Location for Raising.....	2-2
Fuel	
Filter.....	0-11, 6C-4
Gauge.....	8-6, 12-8,43
Checking Procedure.....	8-26
Lines.....	8-9
Liquid Vapor Separator.....	8-5
Pump.....	6B-2
Tank.....	8-1,3,21
Fuse Block.....	12-4,20
Fuse Chart	
Grand Prix.....	12-4

INDEX

Fuse Chart (Continued)		
Pontiac .....	12-4	
Tempest .....	12-4	
		<b>G</b>
Gear		
Differential Pinion .....	4A-11	
Power Steering .....	9-5,45	
Standard Steering .....	9-4,39	
Starter Ring .....	7-7	
Generator .....	6E-10	
Grille .....	14-3,5,7	
		<b>H</b>
Harmonic Balancer		
6 Cylinder Engine .....	6-22	
V-8 Engine .....	6-62	
Headlamp Delay .....	15-35	
Headlights .....	12-21	
Heating and Ventilation .....	(Section 1)	
Blower .....	1-12	
Cables .....	1-4	
Control Panel .....	1-2,8	
Ducts .....	1-3,11	
Functional Test .....	1-3	
General Description .....	1-1	
Heater Core .....	1-13	
Trouble Diagnosis .....	1-17	
Ventilators .....	1-14,16	
Hoods .....	11-1	
Horns .....	12-6,29	
Hydraulic Valve Lash Adjustment		
6-Cylinder Engine .....	6-13	
V-8 Engine .....	6-57	
Hydraulic Valve Lifters .....	6-8,45	
		<b>I</b>
Ignition Circuit .....	(See Engine Electrical)	
Information - General .....	(Section 0)	
Basic Dimensions .....	0-8	
General Information .....	0-1	
Identification		
Body .....	0-1	
Certification Label .....	0-1	
Engine .....	0-2	
Transmission .....	0-3	
Vehicle .....	0-1	
Ignition Lock Assembly .....	0-5	
Lifting and Towing .....	0-4	
Lubrication .....	0-9	
Periodic Service .....	0-9	
Instruments .....	12-8	
Insulators		
6 Cylinder Engine .....	6-11	
V-8 Engine .....	6-47	
		<b>K</b>
Key		
Blanks .....	0-5	
Coding .....	0-5	
		<b>L</b>
Lifting and Towing .....	0-4	
Linkage		
Carburetor .....	6B-4	
Steering .....	9-35	
Transmission .....	(See Transmission)	
Locking Code .....	0-5	
Lubrication .....	0-9	
Luggage Carrier .....	15-56	
		<b>M</b>
Maintenance Items and Intervals .....	0-9	
Manifold		
Exhaust		
6 Cylinder Engine .....	6-9	
V-8 Engine .....	6-47	
Heat Control Valve .....	6C-4	
Intake		
6 Cylinder Engine .....	6-12	
V-8 Engine .....	6-52	
Master Cylinder - Brake .....	(See Brakes)	
Model Identification .....	0-1	
Muffler .....	(See Exhaust System)	
		<b>N</b>
Neutralizer Safety Switch .....	(See Trans-Auto)	
Noise .....	(See Trouble Diagnosis Under Component Name)	
		<b>O</b>
Oil Filter .....	0-9, 6A-14	
Oil Pan		
6 Cylinder Engine .....	6-26	
V-8 Engine .....	6-66	
Oil Pressure Gage .....	12-10	
Oil Pump - Engine		
6 Cylinder Engine .....	6-27	
V-8 Engine .....	6-68	
Oil Recommendations .....	0-9	
		<b>P</b>
Parking Brake .....	5-19	
Pilot Bearing, Clutch .....	7-7	
Pinion Bearing Oil Seal .....	4A-6	
Piston Rings		
6 Cylinder Engine .....	6-39	
V-8 Engine .....	6-77	
P.O.A. Valve .....	1A-8,53	
Positive Crankcase Ventilation		
System .....	6D-1	
Power Brakes .....	(See Brakes)	
Power Steering .....	(See Steering)	
Programmer .....	1B-2,13	
Propeller Shaft .....	4E-1	
Push Rod .....	6-13,54	
Push Rod Cover and Gasket .....	6-13,53	
		<b>R</b>
Radiator .....	6A-17	
Radiator Support and Mounting		
Parts .....	13-1	
Radio .....	15-6,21,62	



Rear Axle.....(See Differential)  
 Rear Seat Speaker.....15-8,43  
 Rear Window Defogger.....15-5,26,29  
 Receiver-Dehydrator Assembly.....1A-19,58  
 Red Lead Test.....4A-12  
 Regulator - Generator.....6E-17  
 Road Test - Tune-Up.....6C-6  
 Rocker Panel Heights.....0-8

**S**

Sensor.....1B-1,5  
 Separator.....8-5  
 Serial Numbers  
     Body.....0-1  
     Engine.....0-2  
     Transmission.....0-3  
     Vehicle.....0-1  
 Service Intervals and Items.....0-9  
 Shock Absorbers  
     Front.....3-13  
     Rear.....4-2, 6  
 Solenoid, Idle Stop.....6B-2  
 Spark Plugs.....6C-2, 6E-28  
 Speaker Rear Seat.....15-8,43  
 Speedometer.....12-10  
 Speedometer Gear Usage.....(Refer to  
     Parts Catalog)  
 Springs  
     Front.....3-14  
     Rear.....4-6  
 Stabilizer Shaft.....3-14  
 Starter Motor.....6E-1  
 Starter Ring Gear.....7-7  
 Steering.....(Section 9)  
     Adjustments.....9-39,45,60  
     General Description.....9-1  
     Linkage - Steering.....9-35  
     Major Service  
         Non-Tilt Steering Column.....9-21,23  
         Power Steering Gear.....9-46  
         Standard Steering Gear.....9-41  
         Tilt Steering Column.....9-21,30  
     Minor Service  
         Belt Tension.....9-60  
         Buzzer Switch.....9-19  
         Lock Cylinder.....9-17  
         Steering Wheel.....9-16  
         Turn Signal Switch.....9-16  
     Specifications.....9-73  
     Steering Column.....9-1  
     Steering Gear.....9-4  
     Tilt Wheel Column.....9-30  
     Trouble Diagnosis and Testing.....9-69  
 Steering Axis Inclination.....3-3  
 Steering Knuckle.....3-15  
 Stereo-Tape Player.....15-7,45,64  
 Stop Lamp Switch.....5-5  
 Superlift Shocks.....4-6  
 Suspension  
     Front.....(Section 3)  
         Adjustments.....3-8  
         Alignment.....3-3,9

Suspension (Continued)

Front (Continued)  
     Ball Joints  
         Inspection.....3-6  
         Remove and Replace.....3-20  
     Control Arms.....3-17  
     General Description.....3-1  
     Minor Service.....3-12  
     Periodic Service.....3-8  
     Shock Absorbers.....3-2,13  
     Specifications.....3-27  
     Springs.....3-14  
     Steering Knuckle.....3-15  
     Trouble Diagnosis.....3-23  
 Rear.....(Section 4)  
     Adjustments.....4-5  
     Automatic Level Control System.....4-10  
         Trouble Diagnosis and Tests.....4-20  
     Control Arms.....4-8  
     General Description.....4-1  
     Shock Absorbers.....4-2, 6  
     Specifications.....4-24  
     Springs.....4-6  
     Trouble Diagnosis.....4-23

**T**

Tachometer.....15-5,18  
 Tail Light.....12-59  
 Tail Pipe.....8-9  
 Thermostat.....6A-5  
 Tilt Steering Wheel.....9-3,30  
 Timing  
     Chain and Cover - V-8 Engine.....6-63  
     Gears - 6 Cyl. Engine.....6-24  
     Ignition.....6C-5, 6E-24  
 Tire Balance.....10-3  
 Tires.....10-1  
 Toe-In, Toe-Out Adjustments.....3-11,12  
 Transistor Regulator.....6E-18  
 Transmission  
     Four Speed Manual - Muncie.....(Section 7D)  
         General Description.....7D-1  
         Major Repair  
             Assemble Transmission.....7D-12  
             Bushing and Oil Seal.....7D-12  
             Cleaning and Inspection.....7D-12  
             Disassemble Transmission.....7D-8  
             Synchronizer.....7D-12  
         Minor Repair.....7D-5  
         Operation.....7D-3  
         Periodic Service.....7D-4  
         Specifications.....7D-18  
         Trouble Diagnosis.....7D-16  
     Three-Speed Manual - Dearborn.....(Section 7A)  
         Adjustments On Car.....7A-2  
         General Description.....7A-1  
         Major Repairs  
             Assemble Transmission.....7A-10  
             Disassemble Transmission.....7A-5  
             Front Bearing.....7A-8  
             Mainshaft.....7A-8

INDEX

Transmission (Continued)		Transmission (Continued)	
Three Speed Manual Dearborn (Continued)		Turbo Hydra-Matic (M-38) (Continued)	
Minor Repairs.....	7A-3	Specifications.....	7G-87
Periodic Service.....	7A-2	Sun Gear.....	7G-62
Specifications.....	7A-14	Trouble Diagnosis.....	7G-83
Trouble Diagnosis.....	7A-12	Valve Body.....	7G-48
Three-Speed Manual - Muncie.....(Seciton 7C)		Turbo Hydra-Matic (M-40).....(Section 7E)	
Adjustments On Car.....	7C-4	Adjustments.....	7E-29
General Description.....	7C-1	Fluid.....	7E-29
Major Repairs		General Description.....	7E-2
Assemble Transmission.....	7C-12	Governor.....	7E-33
Disassemble Transmission.....	7C-8	Hydraulic System.....	7E-6
Inspection.....	7C-10	Inspection of Major Components.....	7E-68
Minor Repairs.....	7C-5	Major Repairs.....	7E-34
Operation.....	7C-2	Assemble Transmission.....	7E-73
Periodic Service.....	7C-3	Disassemble Transmission.....	7E-34
Specifications.....	7C-16	Gear Unit.....	7E-45
Trouble Diagnosis.....	7C-13	Oil Pump.....	7E-54
Three-Speed Manual - Saginaw		Rear Oil Seal.....	7E-34
.....(Section 7B)		Removal of Major Components.....	7E-34
Adjustments On Car.....	7B-2	Oil Leaks.....	7E-87
General Description.....	7B-1	Oil Seals.....	7E-34
Major Repairs		Operation.....	7E-5
Assemble Transmission.....	7B-9	Overhaul.....	7E-34
Disassemble Transmission.....	7B-5	Center Support.....	7E-65
Cleaning and Inspection.....	7B-8	Control Valve.....	7E-51
Minor Repairs.....	7B-3	Direct Clutch.....	7E-61
Oil Seal and Bushings.....	7B-4	Forward Clutch.....	7E-57
Periodic Service.....	7B-2	Governor.....	7E-48
Specifications.....	7B-13	Oil Pump.....	7E-54
Trouble Diagnosis.....	7B-11	Reaction Carrier Roller.....	7E-66
Two-Speed Automaitc (M-35).....(Section 7F)		Parking Linkage.....	7E-34
Adjustments.....	7F-22	Periodic Service.....	7E-29
Assemble Transmission.....	7F-39	Pressure Regulator Valve.....	7E-32
Assemble - Internal Components.....	7F-39	Specifications.....	7E-95
Case.....	7F-37	Trouble Diagnosis and Testing.....	7E-88
Clutch and Drum.....	7F-35	Tune-Up.....(See Engine - Tune-Up)	
Disassemble Transmission.....	7F-26		
General Description.....	7F-1	<b>U</b>	
Hydraulic Components.....	7F-8	Units of Measure.....	0-14
Internal Components.....	7F-27	Universal Joints.....	4E-2
Low Brake Band.....	7F-4	<b>V</b>	
Oil Pump.....	7F-4	Vacuum Tire Pump.....	15-25
Overhaul.....	7F-3	Valance Panel.....	14-3,5,6
Pressure Checks.....	7F-44	Valve Train	
Specifications.....	7F-48	6 Cylinder Engine.....	6-7
Trouble Diagnosis.....	7F-46	V-8 Engine.....	6-45
Turbo Hydra-Matic (M-38).....(Section 7G)		Vehicle Identification Plate.....	0-1
Adjustments.....	7G-31	<b>W</b>	
Assemble Transmission.....	7G-72	Warning Lamps.....	15-6,30
Converter Assembly.....	7G-71	Water Control Valve.....	1A-20
Direct Clutch Assembly.....	7G-56	Water Pump	
Disassemble Transmission.....	7G-38	6 Cylinder Engine.....	6A-4
Forward Clutch Assembly.....	7G-59	V-8 Engine.....	6A-3
General Description.....	7G-2	Weights and Measures.....	0-15
Governor.....	7G-47	Wheel Bearings.....	3-8, 12
Internal Components		Wheel Cylinders - Brakes.....	5-14
Overhaul.....	7G-47	Wheel - Steering.....	9-16
Minor Repairs.....	7G-34	Wheels and Tires.....(Section 10)	
Oil Leaks.....	7G-81	Balancing.....	10-3
Oil Pump.....	7G-50		
Periodic Service.....	7G-31		

Wheels and Tires (Continued)

General Description .....10-1  
Inflation .....10-2  
Rotation .....10-2  
Specifications .....10-1  
Trouble Diagnosis .....10-8

Wind Deflector .....15-57  
Windshield Washer Pump .....12A-4,10  
Windshield Wiper Assembly .....12A-1,9  
Wiring Diagrams .....12-65 thru 12-67  
Wiring Harness .....12-21,50